


Nintendo GameCube Hookup

Connecting to a stereo VCR

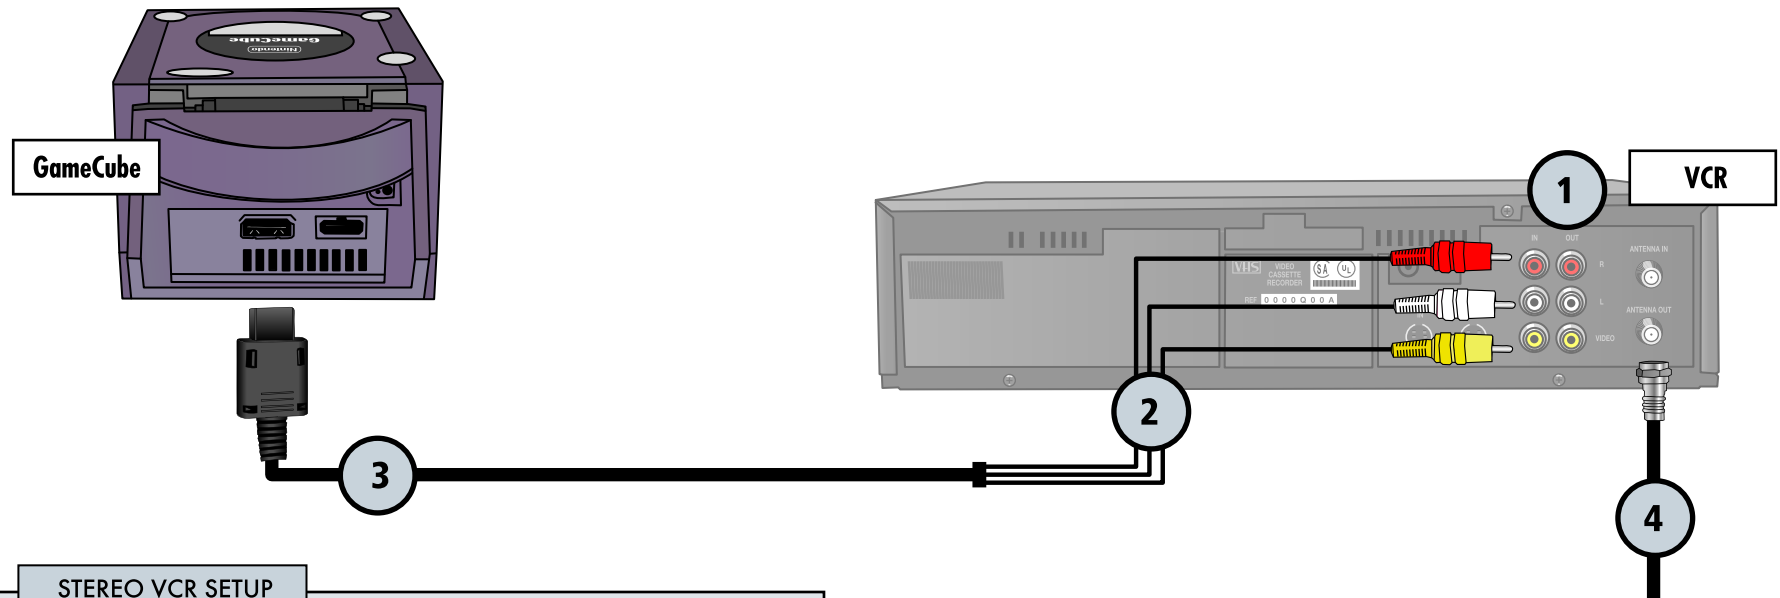

STEREO VCR SETUP

1. Locate a set of open Audio Video INPUTS on the VCR. (Audio/video Input jacks are also known as RCA JACKS.)
2. Place the Yellow (Video) cable into the Video IN on the back of the VCR. Connect the Red (Audio Right) cable to Audio IN Right. Connect the White (Audio Left) cable to the Audio IN Left.
3. Connect the Rectangular (Gray) plug of the Stereo AV Cable into the Analog AV Out port on the back of the Control Deck.
4. Ensure that your VCR is connected to your television via a coaxial (cable) connector from the ANT (RF) OUT on the VCR to the ANT IN on the television.

FOR MONO VCR SETUP

If you have a mono television with only one Audio input, check the diagram of how the hook-up will look. The Y-adaptor pictured is optional; you can also simply leave the white cable disconnected instead.

If using AV cords to input on VCR, the VCR will need to be set to line input or aux etc. on the VCR.